


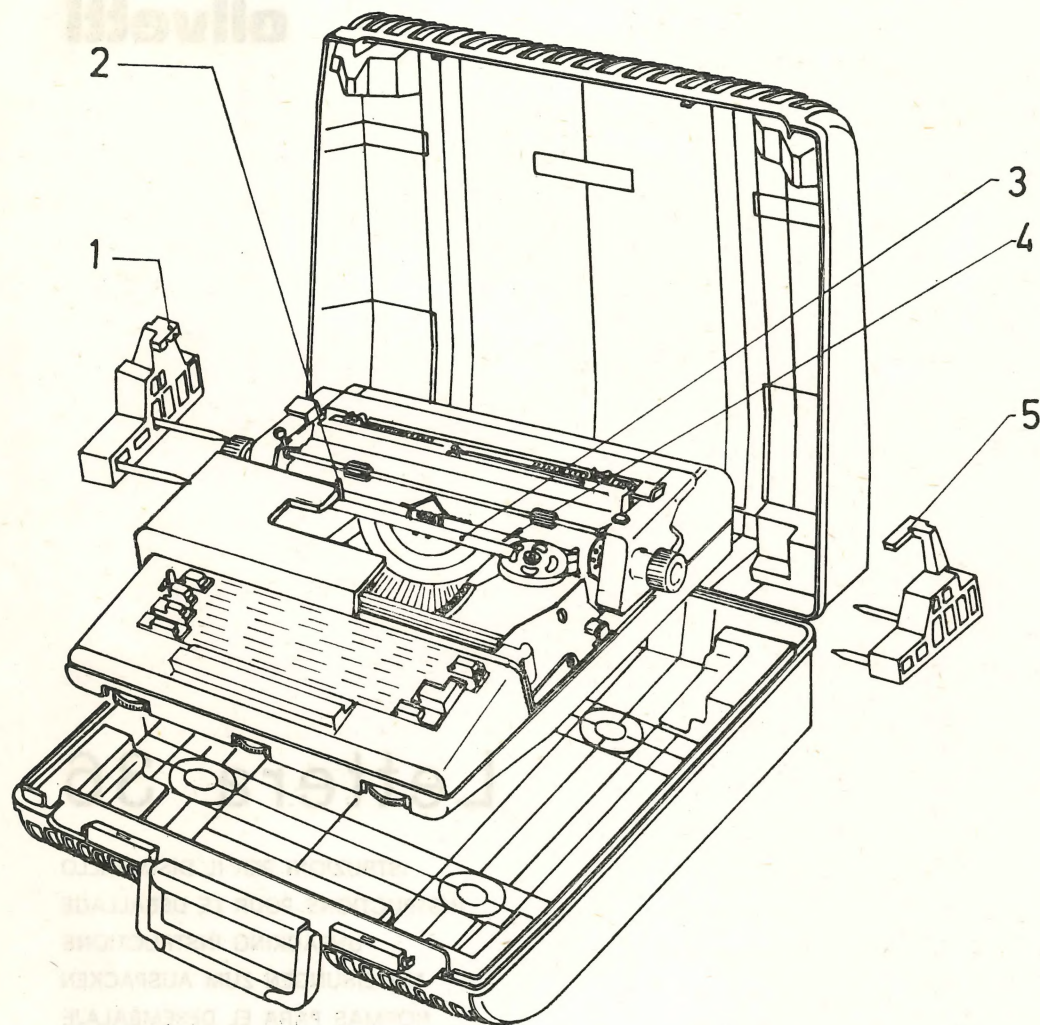

**olivetti**

# Lettera 36

ISTRUZIONI PER IL DISIMBALLO  
INSTRUCTIONS POUR LE DEBALLAGE  
UNPACKING INSTRUCTIONS  
ANWEISUNGEN ZUM AUSPACKEN  
NORMAS PARA EL DESEMBALAJE  
NORMAS PARA O DESEMBALO



**ITALIANO** - Aprire la valigetta ed estrarre la macchina del sacco di plastica.

- Sfilare i due tasselli di plastica 1 e 5.
- Sollevare il coperchio della macchina e togliere le due parti in plastica 2 e 4 ed il cartoncino 3.
- Togliere i blocchetti di protezione posti nei due angoli della valigetta.

**FRANÇAIS** - Ouvrir la mallette et extraire la machine du sac de plastique.

- Enlever les deux tasseaux de plastique 1 et 5.
- Soulever le couvercle de la machine; enlever les deux pièces de plastique 2 - 4 et le carton 3.
- Enlever les blocs de protection placés dans les deux coins de la mallette.

**ENGLISH** - Open the case and extract the machine from the plastic bag.

- Remove the two plastic blocks 1 and 5.
- Lift the cover of the machine and remove the two plastic parts 2 - 4 and the card-board 3.
- Remove the protection blocks from the corners of the case.

**DEUTSCH** - Den Koffer öffnen und die Maschine aus dem Plastikbeutel herausziehen.

- Die beiden Kunststoffblöckchen 1 und 5 herausziehen.
- Den Deckel der Maschine heben und die beiden Kunststoffteile 2 und 4 sowie den Karton 3 entfernen.
- Die Schutzblöckchen entfernen, die sich in den zwei Ecken des Koffers befinden.

**ESPAÑOL** - Abrase la maleta y sáquese la máquina de la bolsa de plástico.

- Retírense los dos tacos de plástico 1 y 5.
- Levántese la tapa de la máquina; luego retírense las dos piezas de plástico 2 - 4 y el cartón 3.
- Retírense los bloques de protección colocados en los dos ángulos de la maleta.

**PORTUGUÊS** - Abrir a mala e extrair a máquina do saco de plástico.

- Tirar os dois blocos de plástico 1 e 5.
- Levantar a tampa da máquina e tirar os dois pedaços de plástico 2 - 4 e o cartão 3.
- Tirar os blocos de protecção colocados nos dous cantos da mala.





## **OLIVETTI 5 YEAR TYPEWRITER GUARANTEE**

Olivetti Corporation of America guarantees for this new Olivetti or Underwood manual or electric portable typewriter the substitution without charge (other than labor and shipping) of any part or parts (except rubber parts, ribbons, carrying case and motor) which become unserviceable through ordinary wear (but not through accident, misuse or neglect) within five (5) years from date of purchase. In addition there will be no charge for parts or labor if unserviceability arises during the first ninety (90) days. To substantiate date of purchase you should keep original sales slip, or reasonable facsimile thereof.

Should defects covered by the guarantee arise within the guarantee period, return the typewriter with proof of purchase to the dealer from which it was purchased or any Olivetti Branch office (see the Yellow Pages under typewriters).

This guarantee applies only to the original purchaser.





**PAPER**  
LA CARA B  
ESIA EN C



**FUST VETO**  
**VPJ**